

Water Restrictor Removal Instructions

Water Flow Restrictors are usually located where Hot & Cold is connected to the shower.

However, just to make sure, also please check where the shower head is connected to the water supply at the top, as sometimes at the factory assembly they put in a third one.

- 1. To remove the water flow restrictor, you need to take off the back-cover panel, and you will be able to see the brass valve, just like on the photo below.**
- 2. Undo the brass water inlet connection and then you will see the water restrictors, as per the photo below, and pull them out to achieve full water pressure.**
- 3. Very Important! When you take off the restrictors you must replace them with the Rubber Washers (that you will find in the accessory bag), otherwise the water will leak.**

